

Installation instructions
Continuous Ink Supply System (CISS).
CISS for inkjet printers and MFU Epson models:
PX700/PX710/PX720/PX720/RX800/PX810/PX820/TX700/TX710/TX800
Item code of CISS: PX/TX700CC-X.X (v1.1En)

Thank you for purchasing CISS TM ColorWay. We appreciate your support and we do our best for convenient usage of our products.

Continuous Ink supply system

Continuous ink supply system (CISS) is a device that is used for massive printing volumes, such as color copying, instant printing and other promotional materials printing. Systems are ideal for home and work operation.

CISS represents a device, which consists of inktanks with inks, linked with multichannel silicon tube with cartridges, identical to the original ones. CISS ColorWay uses high quality inks TM ColorWay.

CISS advantages: volume of donor inktanks is in 10 - 20 times bigger than the regular cartridges; there is no necessity to eject cartridges from printer during refilling, the air does not enter to the printhead, prolonging it's life. And as we know, it's the most expensive part of device; huge savings, more than in 20 - 40 times!

# Box content:

- 1. Ink tanks with plugs (6 colors) 1 set.
- 2. 6 channel silicone tube 1 pc.
- 3. Binders 3 pcs.
- 4. T- shaped clincher- 1 pc.
- 5. Cartridges set (6 pcs) with Combo chips 1 pc.
- 6. Air filters 6 pcs.
- 7. Syringe 6 pcs.
- 8. Gloves 1 pair.
- 9. Ink tanks clincher 2 pcs.
- 10. Installation instructions 1 pc.

The exterior product view and bundling may differ. Drawings and photos are presented in the manual to understand the general installation and operation process of the CISS. The manufacturer reserves the right to change product specifications, designs and bundling without prior notice. Inks optionally: PX/TX700-0.0 (without inks); PX/TX700-6.5 (6 \* 50 ml. inks); PX/TX700-6.1 (6 \* 100 ml. inks).

Recommended ink: CW-EW650BK; CW-EW650C;

CW-EW650M; CW-EW650Y; CW-EW650LC; CW-EW650LM.



# 1. Installation preparation

# Installation of CISS requires technical information how to install it so we advise you to read instruction before installation.

Before installation please check the whole system and box content.

During the period of CISS usage please do not touch chips, do not let dust and liquids to make them broken.

1.1. Before installations of CISS please make sure the printer is in working condition: make sure the printer works well with original cartridges and paper supply mechanism is fine. If the printer is new and it is been never used before so please go to p.1.3.

•

Reminder! The fact that in a printer is used non original consumables can be used as a reason of warranty cancelation.


Make sure that your printer is compatible with this system (list of compatible printer models is on a side label of box).

1.2. Please print test page to evaluate printer ability to work (Pic. 1).

Start/Control panel/ Printers and Fax/Choose printer/Printer adjustment/Maintenance/Nozzle Check

If test is positive so please start CISS installation. If result is negative so please follow the recommendations on cleaning printing head via software of printer. Maintenance, Head Cleaning, if this does not bring positive effect so please service your printer in specialized center.

- 1.3. Please check compatibility which tank belongs to which cartridge and match of cartridge colors sequence in printer and CISS.
- 1.4. Get straight a silicone tube, it should be in fine working condition. Let CISS to lie for a while for getting room temperature.
- 1.5. All procedures are recommended to be organized in a way to avoid getting inks on furniture, floor and clothes.

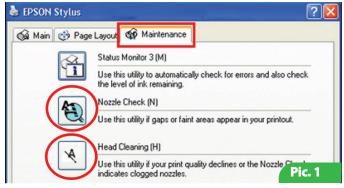

Attention! If previously you have been using low quality inks or you change now pigment inks into dye inks or dye inks into pigment inks. In this case please clean a printing head before printing with a special cleaning liquid. If you have been using original inks or inks of TM ColorWay in this case no need to clean printing head. TM ColorWay inks is completely compatible with original inks and during installation of TM ColorWay CISS no need to clean printing head.

2. Ink tank refilling

PLEASE NOTE: INK VERY BADLY WASHED OFF, PLEASE ORGANIZE ALL THE PROCEDURES VERY CAREFULLY!


INK CAN RUIN YOUR FURNITURE AND CLOTHES; MAKE SURE THAT YOUR WORKING SPACE AND CLOTH ARE NOT CHERISHED.


Fill in the ink tanks as it shown on Pic. 2:

- 2.1. Plug small aperture with the rubber;
- 2.2. Inject ink though the big aperture;
- 2.3. Plug the big aperture;
- 2.4. Unplug the small aperture, insert the air filter;
- 2.5. In case big apertures weren't plugged, ink level in both chambers will become equal. In this case you have to unplug both chambers, insert the syringe with pulled back plunger into the small aperture. Carefully push the syringe plunger down, injecting the air into the small chamber and transferring ink into the big chamber. Than plug the big aperture (Pic. 2 images 5).

In-service ink tanks should be correctly filled-in: please pay attention to operating level of ink in small chamber – it should be minimal.

# 2 land work level

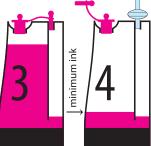

 



Note: Do not place ink tanks higher than level of cartridges (printing head) it may cause leakage. Due to excess pressure ink flows into the printer and may spoil printing head and electronic contacts. Keep the ink tanks on the same level with the printer. The air filters (membrane) should be clean and dry. If the air filter is moisten with ink or any other liquid – it stops passing the air and CISS stops working properly (the missing colors are observed on printouts). In this case it'll be better to take filter away and use the CISS without it.

# 3. System Pumping

 $During\ first\ system\ installation, it\ is\ necessary\ to\ pump\ system\ it\ means\ to\ fill\ silicone\ tube\ and\ cartridges\ with\ inks.$ 

- 3.1. For system pumping pull out in a cartridge a rubber cap on the top of cartridge, you can use for this a pen
- 3.2. Put a syringe in hole and slowly pull a plunger of syringe and you see how inks filling cartridge (Pic. 3), please proceed with this operation until inks come into a syringe.
  - 3.3. Remove a syringe from cartridge and close a hole with rubber cap.
  - 3.4. Take a clean syringe and pump other colors.

If during a pulling of syringe plunger it is hard to pull or plunger comes back so in this case check a silicone tube for any kinks or bends.



# 4. System Installation

- 4.1. Open cartridge block of MFU, with your knife please cut off a piece of plastic (Pic.4), you need it to lay properly a silicone tube.
- 4.2. Install cartridges of CISS in carriage of printer (Pic. 5), pay attention that you need more efforts than with original cartridges. The main efforts should be focused on cartridges caps. Cartridges should be installed until click (Pic. 6). Each cartridge should be clicked properly otherwise chips of cartridges cannot contact with carriage chips and printer cannot recognize cartridges. Please perform this procedure carefully.
  - 4.3. Close a cap of MFU, make sure a silicone tube is not bended (Pic. 7.).







5. System start-up

Before system start, please monitor whether you strictly followed to all instructions in section 2 "Refilling of ink tanks". Make sure that ink tanks are on the same level with the printer; and air holes are open.

5.1. Switch on MFU. Wait until printer is ready. If printer does not recognize all cartridges, please do p.6. Cartridges reset.

5.2. With a help of printer driver do 2-3 cleaning procedures and after this print out a test page and then make sure all nozzles print properly. (p.1.2.). If some nozzles do not print,

EPSON

please leave printer for 5-10 hours, over this time an air that could get in printing head during installation can go out and also a system pressure stabilizes.

5.3. If nozzles cleaning does not help, you can try to make pumping of system cartridges, for this please cut a syringe with a knife (Pic. 8), put a syringe in cartridge and pull a plunger of syringe until inks are in a syringe (Pic. 9). When you put a syringe in cartridge, a syringe get a cartridge valve in open position and a tip of syringe let not to stick a valve of cartridge. After this please install cartridges back and do p.5.2. of p.5. System start-up.

### 6. Cartridaes reset

- 6.1. If printer says that one of cartridges is empty or it is impossible to recognize it, so it is necessary to make reset of ink level. For this open a cap of scanner in MFU.
- 6.2. Please press chips button and hold it pressed for 5 sec (Pic 10). Please do it gently in order not to harm a button. This procedure imitates a natural replacement procedure. Position of button may vary on chips models but it always on top of cartridges.
  - 6.3. Close a cap of scanner. MFU does pumping of printing head and reset empty cartridge.
- 6.4. If there is a problem with cartridge reset, switch off and after 2 minutes switch on printer. Pull out all cartridges from carriage when it is in Change position for 2-3 sec and put them back in, make sure all cartridges clicked.
  - 6.5. Printer (MFU) says of empty cartridges when it is consumed of inks equal to original cartridge volume.



Pic. 9

# 7. Ink tanks binding

7.1. CISS box includes clinchers for ink tanks and if it is necessary you may stick tanks to the printer. Please follow instructions on shown picture 11, 12, 13.







# 8. Service regulations of CISS

- 8.1. External ink tanks should be filled correctly. A minimum level of inks should be in small ink tanks (p. 2 "Refilling of ink tanks"). In case when in small tank too much of inks (Pic. 14), close all caps of tanks (Pic. 14). Tilt tanks on big caps and wait until inks will go from big tanks to small tanks (Pic. 15). Get tanks in standard position and open small caps (Pic. 16). Put in air filters.
  - 8.2. Big holes in tanks should be closed and small holes open with air filters.
- 8.3. External ink tanks should be standing on the same level with printer, do not lift them higher than level of cartridges because it may cause leakage. If air filters do not work properly due to various reasons please remove them and use system without them.
  - 8.4. A Silicone tube should be installed properly and do not obstruct a movement of printing head.
  - 8.5. Print no less than 1 time a week to avoid printing head drying.
  - 8.6. Use only high quality inks, do not mix inks of various brands and types. It may harm cartridges or printing head.
  - 8.7. During printing do not get upside down ink tanks.
  - 8.8. Use CISS in clean room at temperature of 15-35 C.
  - 8.9. Do not get separate CISS parts. For getting the best printing quality please use inks and paper TM ColorWay.
  - 8.10. Do not keep it under direct sun light.
  - 8.11. Keep out of the reach of children, do not let inks to harm eyes.







# 9. Transportation of CISS with printer.

- 9.1. Put out air filters and close with caps small halls in order to avoid leakage.
- 9.2. Bind with binder a silicone tube that comes from CISS to printer.
- 9.3. Transport a printer with CISS in horizontal position, do not get printer upside down. For more convenience you can stick air tanks to printer.

### 10. Questions and answers

# 10.1. Not printed well some places (pictures/text).

In case when you have done a couple of times cleaning of printing heads and still printing head prints with white stripes.

Solution: cleaning of printing head several times, after each cleaning procedure make a test page. Between cleaning procedure make a pause for 5-10 min. If it does not help so please switch off printer and leave it for 12 hours in this condition. After this print a test page. If problem remains, please install original cartridges, if the same problem remains so problem with printer, please make a service for your printer.

### 10.2. Air bubbles in a silicone tube.

In case if cleaning do not lead to positive result and problems remains. Solution is to do again p.3. System pumping, Probably in cartridges of CISS is not enough of inks.

### 10.3. A silicone tube is bended.

In case when one or two colors do not work. Solution: please print a test page and check the whole length of silicone tube. After removing of bends please make cleaning of printing head.

### 10.4. Unnatural colors of printing

In case when all colors are unnatural. Solution: all cartridges should meet the respective color that is stated on a carriage of printing head. If colors mixed please wash system and refill it again in accordance with right order.

# 10.5. Poor printing quality.

In case if a test page is printed well but printing quality is low. Solution: problem is printing settings, software installed incorrectly. Please change printer settings. Other reason might be not calibrated printing head. To fix it you need to calibrate (see instructions to the printer). During printing appears problems with colors or mix of color it might be the end of printing head life.

# 10.6. Printer does not recognize cartridges.

In case: if indicator of ink replacement is on and after you properly clicked cartridges in carriage and performed p.7. and printer driver on computer says No cartridge or replace cartridge.

Solution: cartridge is not properly installed in carriage or chip on cartridges are broken or dirty. In order to solve a problem you need to put out cartridges from carriage and fix, clean or replace. And after to install cartridges until click.

# 10.7. Problem with CISS installation.

In case: when printer says General Error or your printer needs service

Solution: during the printing a carriage cannot move. A silicone tube might be too short of long, please adjust a necessary length of silicone tube. If an external part gets in a printer, please check printer body on any external parts.

