

Box Content

1. Refill cartridges without chips 4 pcs – 1 set.
2. Syringe without needle - 4 pcs.
3. Needle for refilling - 4 pcs.
4. Air filter - 4pcs.
4. Manual 1 pc.

The exterior product view and bundling may vary. Drawings and photos are presented in the manual to understand the general installation and operation process of Refill cartridges. The manufacturer reserves the right to change product specification, designs and bundling without prior notice.

1. Preparation for installation

Before installation please check the whole system and box content.
 During the period of Refill cartridges usage please do not touch chips, do not let dust and liquids to make them broken.

Reminder! The fact that in a printer is used non original consumables can be used as a reason of warranty cancellation. Make sure that your printer is compatible with this system (list of compatible printer models is on a side label of box).

- 1.1. Before Refill cartridges installation please check the printer working condition: check that your printer work properly with original cartridges and everything is fine with paper supply mechanism and other printer mechanisms.
- 1.2. Please print nozzles check in order to check printer workability, (Hold down the "Power", click on "Cancel" button twice, then on the "Feed sheet" once and release the power button (see printer Manual). If nozzles check gives positive result so then plz start Refill cartridges installation. If result is negative, please follow recommendation to clean printing head by means of printer software (please see printer or MFU instruction), if this doesn't give a positive effect please service your printer.
- 1.3. All procedures are recommended to be organized in a way to avoid getting inks on furniture, clothes and other surfaces.

2. The original chip installing.

You must replace chips from the original cartridges before refilling the cartridges. Please note, that the chips should be working, the printer may show a minimum level of ink or their absence, but should not block printing.

- 2.1. Open the cover which closing the cartridges and remove them from the printer (MFP).
- 2.2. Make carefully a cut from stationery knife between the cartridge case and its base on both sides. (Pic. 1)
- 2.3. Remove the base with chip from the cartridge. (Pic. 2)
- 2.4. Remove the base from refillable cartridge in the same method.
- 2.5. Insert the base with chip from the original cartridge in refillable cartridge. (Pic. 3)
- 2.6. Repeat steps 2.2. - 2.5. for each cartridge.



Pic. 1



Pic. 2



Pic. 3

3. Refilling cartridges

Each cartridge has two holes, first N1 for ink and second N2 for air. (Pic. 4)


- 3.1. Open two holes on the top of the refillable cartridge (Pic. 4).

Hole N1 is refueling. Refuel ink through it. When printing refueling hole must be always closed. Hole N2 is air. When printing and refueling cartridge supplied air through it. It must be open after refuel, when use and it must be plugged air filter.

- 3.2. Fill the ink inside cartridge with a syringe through the filling hole. It is necessary for the filling of about 100ml color ink and 200ml black ink, because cartridges has a large capacity. Pay attention to the minimum level of ink inside cartridge, it should not be less than this limit. (Pic. 5, 6)



Pic. 4

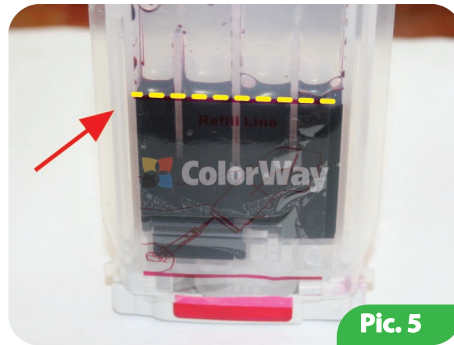

Pic. 5



Pic. 6

- 3.4. Remove the syringe, close refueling hole N1 using cap, plug air filter in hole N2. (Pic. 4)


- 3.5. When you first install the cartridges is necessary to pump the output channel of the cartridge and ink tract inside the system of printer. (chapter 3.6, 3.7)

- 3.6. To do this, tilt the cartridge and carefully insert the needle of an empty syringe into the output hole from below of the cartridge to 10mm (Pic. 7). Pull the piston of the syringe by pulling the air up until the syringe does not start supplying ink.

- 3.7. Install the cartridges into the printer or MFP (Pic. 8). Then remove the printheads from the printer (MFP) (look at printer (MFP) manual). Carefully insert the needle of an empty syringe in the printhead intake hole of the ink to 10mm (Pic. 9). Pull the piston of the syringe up, pumping tract ink inside the printer as long as the syringe does not start supplying ink. Install the printhead back.

- 3.8. Turn on the printer (MFP), lock closing lid sensor means at hand (Pic. 8). The location of the sensor may be in another place.


- 3.9. Print nozzle check test or test page like in chapter 1.2 of instruction.

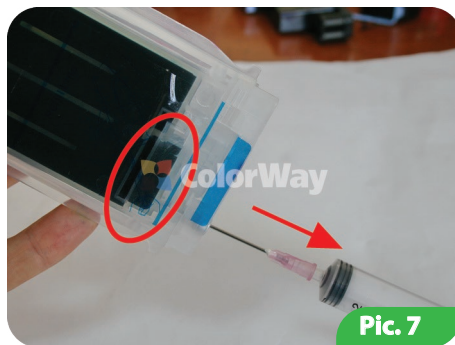

Pic. 7



Pic. 8

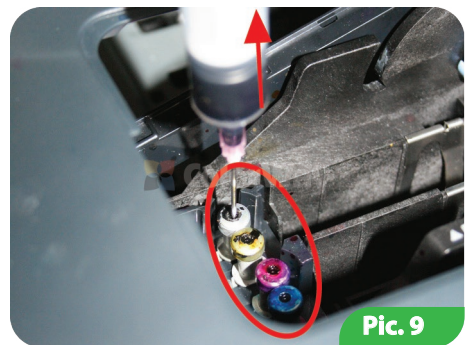

Pic. 9

4 . The rules for refueling refillable cartridges

4.1. You may refueling cartridges without removing them from the printer. Process of refueling is the same like in charter 3 . Refilling cartridges



When you work with original cartridge chips printer may display a message that the ink level is low, but it should not block printing. If the printer is printing blocks, the chip must be replaced. Print not less than 1 time a week, do not keep Refill cartridges under direct sun light.

Use Refill cartridge of TM ColorWay in clean place with ait temperature 15-35 C.

Use ink that you used initially. Do not mix inks of different brands and types.

In some exceptional cases from the printer may come out used inks, in order to avoid this situation we advise to set Ink output, for more detailed information you can contact TM ColorWay.

During transportation or long-term storage, close air holes in Refill cartridges, do not get upside down printer with Refill cartridges. Do not get separated cartridges parts. In order to get the best quality use photo paper of TM ColorWay.

Important: keep inks out of reach of children; do not drink ink; keep ink away from your eyes.