

Box Content

1. Refill cartridges with chips 4 pcs – 1 set.
2. Syringe without needle - 4 pcs.
3. Needle for refilling - 4 pcs.
4. Manual 1 pc.

Inks optionally: H950RC-0.0 - (without inks), H950RC-4.5(P) - (4 bottles of inks and each 50 ml(P-with one pigment ink)), H950RC-4.1 - (5 bottles of inks and each 100 ml(P-with one pigment ink)).

Recommended ink:

Black ink on choices: **CW-HP360BK** - pigmented inks (not be mixed with CW-HW350BK); **CW-HW350BK** - dye ink (not be mixed with CW-HP360BK). Coloured - **CW-HW350C**; **CW-HW350M**; **CW-HW350Y**.

The exterior product view and bundling may vary. Drawings and photos are presented in the manual to understand the general installation and operation process of Refill cartridges. The manufacturer reserves the right to change product specification, designs and bundling without prior notice.

1. Preparation for installation

Before installation please check the whole system and box content.

During the period of Refill cartridges usage please do not touch chips, do not let dust and liquids to make them broken.

Reminder! The fact that in a printer is used non original consumables can be used as a reason of warranty cancellation. Make sure that your printer is compatible with this system (list of compatible printer models is on a side label of box).



1.1. Before Refill cartridges installation please check the printer working condition: check that your printer work properly with original cartridges and everything is fine with paper supply mechanism and other printer mechanisms.

1.2. Please print nozzles check in order to check printer workability, (Hold down the "Power", click on "Cancel" button twice, then on the "Feed sheet" once and release the power button (see printer Manual). If nozzles check gives positive result so then plz start Refill cartridges installation. If result is negative, please follow recommendation to clean printing head by means of printer software (please see printer or MFU instruction), if this doesn't give a positive effect please service your printer.

1.3. All procedures are recommended to be organized in a way to avoid getting inks on furniture, clothes and other surfaces.

2. Refilling cartridges

Each cartridge has two holes , first N1 for ink and second N2 for air. (Pic. 1)

2.1. Open 2 holes on the top part of cartridge. (Pic. 2).

2.2. Get ink in syringe with necessary color and put a needle on a syringe. If Refill cartridges set contains 50 ml inks with special nozzle you can use them without syringe and needle.

2.3. Put a needle (or special nozzle) in filling hole N1. Do not damage inside walls of cartridges.

2.4. Fill necessary quantity of inkjet ink in refill cartridges (Pic. 3)

Control visually of cartridge filling through its translucent walls.


2.5. Close filling hole N1 with a cap, a hole N2 please leave open.

Working position of holes (Pic. 1) N1 - closed, N2 - open.

2.6. In the same way fill other cartridges, using for each color separate syringe.

2.7. Put set of Refill cartridges in a printer. Wait until all operations are done by MFU and please wait until it is ready to work.


2.8. At first installation of refilled cartridges printer will show 100% level of inks. During printing level of inks will get lower. When printer will show the message that inks has ended, press the button "continue printing" in a dialog box. After that, printer will continue printing without displaying of the ink levels. Therefore it is necessary to visually control the rest of inks in a cartridges through its transparent walls.

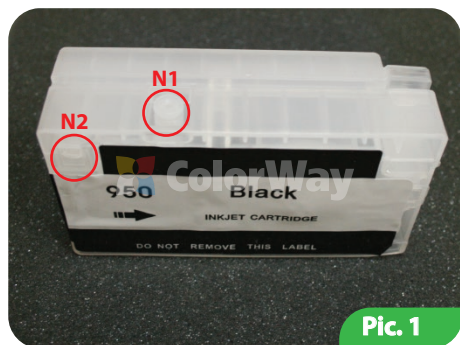

Pic. 1



Pic. 2

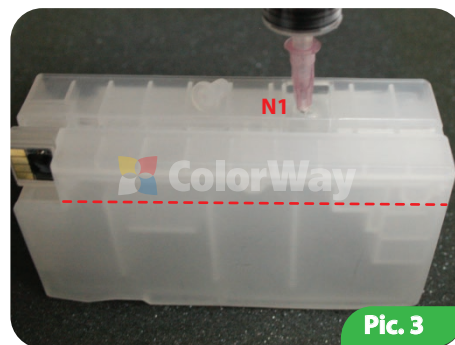

Pic. 3

3. Questions and answers.

3.1. Printer does not recognize cartridges

-make sure that all chips are properly placed on their places on a cartridge and there is no ink and dirt on them. Do not touch chips with your hands.

-make sure the cartridges are installed properly until click.

-install all set of refill cartridges;

-cartridge hole in the working position: N1 - closed, N2 - open.

-Install cartridges one by one and controlling on display what cartridge does not work.

3.2. Ink does not come to printing head:

-make sure that cartridges are filled properly and air holes are open

-cartridge hole in the working position: N1 - closed, N2 - open.

When you work printer may display a message that the ink level is low, but it should not block printing.

Print not less than 1 time a week, do not keep Refill cartridges under direct sun light.

Use Refill cartridge of TM ColorWay in clean place with ait temperature 15-35 C.

Use ink that you used initially. Do not mix inks of different brands and types.

In some exceptional cases from the printer may come out used inks, in order to avoid this situation we advise to set Ink output, for more detailed information you can contact TM ColorWay.

During transportation or long-term storage, close air holes in Refill cartridges, do not get upside down printer with Refill cartridges. Do not get separated cartridges parts. In order to get the best quality use photo paper of TM ColorWay.

Important: keep inks out of reach of children; do not drink ink; keep ink away from your eyes.